



COWHOUSE SCRAPER


INSTRUCTIONS

OPERATING INSTRUCTIONS FOR THE COWHOUSE SCRAPER

1. To **START** the scraper - Push the Green button



2. To **STOP** the scraper - Push the red stop button twice

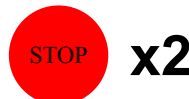

3. To isolate the scraper - turn the bottom switch anti-clockwise to the off position BUT leave the top switch ON.

- There is an isolation switch on each scraper at the drive unit - DO NOT turn these off as this will upset the timing sequences.
- Timers are inside the control box in the plant room and can be programmed individually to suit each run.
- It is recommended that the feedlane scrapers do one run every 4 hours (when all cows are inside)*, and the outer lanes every 6 hours

If Cowhouse is used for feedpad use only, close off the outer lanes and turn the scrapers off. Feedlane scrapers can be programmed to clean when cows leave after feeding, say 10am and 8pm. If cows are inside at night, run scrapers as above*.

The cleaner the lanes are, the better animal wellbeing you will achieve.

Maintenance

- All roller pulleys should be checked once a year;
- Every 24 months they will need replacing;
- Rope check and shortening is needed when scrapers do not run over the grating anymore;
- Grease the drive every 3 months.

Cleaning

- Clean behind the scrapers at the door and every 3-4 weeks, just scoop and throw on the moving side of the scraper so that the scraper picks this up and takes it away;
- Clean the grating when needed (silage can cause blockages and barriers can skew the scraper and cause damage).

Emergencies call or/and txt 021 649 049 and 021 646 076

Maintenance call out 0800 80 90 98 or support@technipharm.co.nz